

Nokia 770 Internet Tablet – OS 2005 FAQs

Where can I find the version number of the Nokia 770 software update wizard?	3
What version of the cable driver is required for the Nokia 770 software update wizard?	3
Can I extract zip archives from my Nokia Internet Tablet?	3
What should I do if I have trouble browsing some specific websites?	3
What should I do if I have trouble playing audio/video files by using the video player?	4
What content can I back up by using the backup tool on my Nokia 770 Internet Tablet?	5
How do I change the WLAN timeout setting?	5
Which media formats does my Nokia 770 Internet Tablet support?	5
What should I do, if I get an error message while updating the software on the Nokia 770 Internet Tablet?	7
Can I update the software on my Nokia 770 Internet Tablet using a Linux PC?	7
How do I uninstall the Nokia 770 software update wizard from my PC?	7
How do I update the software on my Nokia 770 Internet Tablet?	7
How do I change the clock settings on my Nokia Internet Tablet?	8
What kind of memory cards does my Nokia 770 Internet Tablet support?	8
How do I define the HSCSD connection settings on my Nokia 770 Internet Tablet?	8
Do I lose all my data if I restore original settings to my Nokia 770 Internet Tablet?	9
Which playlist formats are supported by the Internet radio?	9
How do I connect my Nokia Internet Tablet to a computer?	9
How do I use a MultiMediaCard with my Nokia Internet Tablet?	9
How do I play the games on my Nokia Internet Tablet?	10
How do I use the sketch application on my Nokia Internet Tablet?	10
How do I use the notes application on my Nokia Internet Tablet?	10
How do I use the calculator on my Nokia Internet Tablet?	10
How do I use the connection manager on my Nokia Internet Tablet?	10
How do I use the file manager on my Nokia Internet Tablet?	10
How do I use the control panel on my Nokia Internet Tablet?	11
How do I use the PDF reader on my Nokia Internet Tablet?	11
How do I use the news reader on my Nokia Internet Tablet?	12
How do I view images on my Nokia Internet Tablet?	12



Nokia 770 Internet Tablet – OS 2005 FAQs

How do I use the video player on my Nokia Internet Tablet?	12
How do I use the Internet radio on my Nokia Internet Tablet?	13
How do I use the audio player on my Nokia Internet Tablet?	13
How do I use the e-mail folders on my Nokia Internet Tablet?	13
How do I use e-mail scheduling on my Nokia Internet Tablet?	14
How do I write and send an e-mail message from my Nokia Internet Tablet?	14
How do I retrieve and read e-mail on my Nokia Internet Tablet?	15
How do I program e-mail settings on my Nokia Internet Tablet?	15
How do I use e-mail messaging on my Nokia Internet Tablet?	16
How do I use bookmarks on my Nokia Internet Tablet?	16
How do I browse the Internet on my Nokia Internet Tablet?	16
How do I disable connections on my Nokia Internet Tablet?	17
How do I change the connectivity settings on my Nokia Internet Tablet?	17
How do I set up a cellular connection on my Nokia Internet Tablet?	18
How do I use Bluetooth wireless technology on my Nokia Internet Tablet?	19
What is the difference between a software update and an operating system upgrade?	20
How do I edit a WLAN connection on my Nokia Internet Tablet?	20
How do I create a new WLAN connection on my Nokia Internet Tablet?	20
How do I access the Internet on my Nokia Internet Tablet?	21
How do I find the MAC address of the Bluetooth and WLAN connections on my Nokia 770 Internet Tablet?	21
How do I search for files on my Nokia Internet Tablet?	21

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: WHERE CAN I FIND THE VERSION NUMBER OF THE NOKIA 770 SOFTWARE UPDATE WIZARD?

A: To find the version number of the Nokia 770 software update wizard, do the following in the Windows operating system:

Open the **Start** menu, and select **Settings > Control Panel > Add/Remove Programs > Nokia 770 software update wizard > Support information**.

Download the latest version of the Nokia 770 software update wizard from <http://www.nokia.com/770/support>. Select **Download Software Update** link > fill **Product ID** field and press **Submit** button.

Q: WHAT VERSION OF THE CABLE DRIVER IS REQUIRED FOR THE NOKIA 770 SOFTWARE UPDATE WIZARD?

A: The Nokia connectivity cable driver must be version 1.00.150.6, or newer. Version 1.00.150.6 of the Nokia connectivity cable driver is included in the software update tool.

Q: CAN I EXTRACT ZIP ARCHIVES FROM MY NOKIA INTERNET TABLET?

A: Nokia Internet Tablet with 2005 Software Edition does not support extracting zip archives.

Q: WHAT SHOULD I DO IF I HAVE TROUBLE BROWSING SOME SPECIFIC WEBSITES?

A: Some websites need much more memory capacity than others. For example, websites which include flash movies, flash games, or some multimedia files could slow down the performance of the browser application in the Nokia 770 Internet Tablet.

To increase the memory capacity of the Nokia 770 Internet Tablet, do the following:

- Close all additional web pages from your device.
- Close all additional applications from your device.

You could also try to open the website without using the flash plug-in in your device. To disable the flash plug-in, do the following:

1. Open the **Web browser**.
2. Select **Web > Tools > Settings...**
3. Select the **Plug-ins & scripts** page, uncheck **Enable plug-ins**, and tap **OK**.
4. Try to reopen the website.

If you still experience problems, reboot your device and try to reopen the website.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: WHAT SHOULD I DO IF I HAVE TROUBLE PLAYING AUDIO/VIDEO FILES BY USING THE VIDEO PLAYER?

- A:**
- Close all other applications on your Nokia 770 Internet Tablet and try to reopen the audio/video file.
 - Check that the video file includes a supported video file container (for example, .mpg or .avi) and video format (for example, MPEG-1 or MPEG-4)

All supported audio/video containers and formats with specific requirements are listed below:

video/3gpp	*.3gp	3GPP video, MPEG4 Visual Simple Profile Level 2, H.263 profile 0 level 10, 3GPP demux based on spec 3GPP TS 26.244 v6.0.0 (2004-03): Basic profile, excluding timed text, audio-only clips not supported	Video Player
video/3gpp	*.3gpp	3GPP video, MPEG4 Visual Simple Profile Level 2, H.263 profile 0 level 10, 3GPP demux based on spec 3GPP TS 26.244 v6.0.0 (2004-03): Basic profile, excluding timed text, audio-only clips not supported	Video Player
video/mpeg	*.mpe	MPEG-1 Video, up to CIF resolution @30 fps	Video Player
video/mpeg	*.mpeg	MPEG-1 Video, up to CIF resolution @30 fps	Video Player
video/mpeg	*.mpg	MPEG-1 Video, up to CIF resolution @30 fps	Video Player
video/x-msvideo	*.avi	AVI file format (containing MPEG4 Visual Simple Profile Level 2/H.263 profile 0 level 10, MPEG audio layer III)	Video Player
video/x-real	*.ra	RealAudio 8,9,10	Video Player
video/x-real	*.ram	RealNetworks Metafile	Video Player
video/x-real	*.rm	RealAudio, RealVideo 8,9,10 (QCIF @15 fps)	Video Player
video/x-real	*.rmj	Real Jukebox file	Video Player
video/x-real	*.rmvb	RealVideo variable bitrate	Video Player
video/x-real	*.rpm	RealNetworks Metafile	Video Player
video/x-real	*.rv	RealVideo 8,9,10 (QCIF @15 fps)	Video Player
video/x-real	*.sdp	Session Description Protocol File	Video Player

- If your media file is supported, try to play it with the media player on your PC to check if it is corrupted.
- Restart the Nokia 770 Internet Tablet, and try to open the audio/video file again.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: WHAT CONTENT CAN I BACK UP BY USING THE BACKUP TOOL ON MY NOKIA 770 INTERNET TABLET?

A: With the backup tool you can copy the following content from the memory of the device to a memory card:

- E-mail messages and Contacts from e-mail application
- All user document files and folders.
- All user media files (images, music and video) and folders.
- Browser bookmarks, News subscriptions
- Settings which include, for example, personalized settings, language and regional settings, background image, e-mail settings, browser settings, and connectivity settings.

Q: HOW DO I CHANGE THE WLAN TIMEOUT SETTING?

A: The default WLAN idle time value is 60 minutes.

To change the WLAN idle time setting, do the following:

1. Open the **Control panel** from the task navigator menu, and select **Connectivity**.
2. On the **Connectivity settings** dialog, go to the **Idle times** page, and select the desired WLAN idle time from the list (5, 10, 60 or Unlimited minutes.)
3. Tap **OK** to save the setting.

Q: WHICH MEDIA FORMATS DOES MY NOKIA 770 INTERNET TABLET SUPPORT?

A: Your Nokia 770 Internet Tablet with 2005 software edition supports the most common variations of the following audio and video formats:

Mime type	File extension	Version	Application
audio/x-mp3	*.mp3	MPEG-1, MPEG-2 and MPEG-2.5 Layer III, CBR/VBR, 8kbps - 320kbps bitrate	Audio Player
audio/x-mp2	*.mp2	MPEG-1 and MPEG-2 Layer II, CBR/VBR, all bitrates except free bitrate mode	Audio Player
audio/x-m4a	*.aac	MPEG-4 AAC, LC/LTP, mono/stereo, up to 288kbps bitrate	Audio Player
audio/x-amr	*.amr	GSM Adaptive Multi-Rate Speech, RFC 3267	Audio Player
audio/x-amr	*.awb	Adaptive Multi-Rate Wideband Speech, RFC 3267	Audio Player
audio/x-wav	*.wav	Linear PCM, a-law, u-law, IMA ADPCM	Audio Player
audio/x-mpegurl	*.m3u	MP3 Playlist File	Audio Player
audio/x-scpls	*.pls	shoutcast PLS file format	Audio Player
video/3gpp	*.3gp	3GPP video, MPEG4 Visual Simple Profile Level 2, H.263 profile 0 level 10, audio: Adaptive Multi-Rate Speech, Adaptive Multi-Rate Wideband Speech, MPEG-4 AAC LC/LTP - 3GPP demux based on spec	Video Player

Nokia 770 Internet Tablet – OS 2005 FAQs

		3GPP TS 26.244 v6.0.0 (2004-03): Basic profile, excluding timed text, audio-only clips not supported	
video/3gpp	*.3gpp	3GPP video, MPEG4 Visual Simple Profile Level 2, H.263 profile 0 level 10, audio: Adaptive Multi-Rate Speech, Adaptive Multi-Rate Wideband Speech, MPEG-4 AAC LC/LTP - 3GPP demux based on spec 3GPP TS 26.244 v6.0.0 (2004-03): Basic profile, excluding timed text, audio-only clips not supported	Video Player
video/mpeg	*.mpe	MPEG-1 Video, up to CIF resolution @30 fps	Video Player
video/mpeg	*.mpeg	MPEG-1 Video, up to CIF resolution @30 fps	Video Player
video/mpeg	*.mpg	MPEG-1 Video, up to CIF resolution @30 fps	Video Player
video/x-msvideo	*.avi	AVI file format (containing MPEG4 Visual Simple Profile Level 2/H.263 profile 0 level 10, MPEG audio layer III)	Video Player
video/x-real	*.ra	RealAudio 8,9,10	Video Player
video/x-real	*.ram	RealNetworks Metafile	Video Player
video/x-real	*.rm	RealAudio, RealVideo 8,9,10 (QCIF @15 fps)	Video Player
video/x-real	*.rmj	Real Jukebox file	Video Player
video/x-real	*.rmvb	RealVideo variable bitrate	Video Player
video/x-real	*.rpm	RealNetworks Metafile	Video Player
video/x-real	*.rv	RealVideo 8,9,10 (QCIF @15 fps)	Video Player
video/x-real	*.sdp	Session Description Protocol File	Video Player
image/bmp	*.bmp	BMP images	Image Viewer
image/gif	*.gif	GIF images	Image Viewer
image/jpeg	*.jpe	JPEG images	Image Viewer
image/jpeg	*.jpeg	JPEG images	Image Viewer
image/jpeg	*.jpg	JPEG images	Image Viewer
image/png	*.png	PNG images	Image Viewer
image/svg+xml	*.svg	SVG Tiny Profile	Image Viewer
image/tiff	*.tif	Tag Image File Format	Image Viewer
image/tiff	*.tiff	Tag Image File Format	Image Viewer
image/wbmp	*.wbmp	WBMP images	Image Viewer
image/x-ico	*.ico	ICO images	Image Viewer
application/x-shockwave-flash	*.swf	Macromedia Flash 6	Internet Browser

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: WHAT SHOULD I DO, IF I GET AN ERROR MESSAGE WHILE UPDATING THE SOFTWARE ON THE NOKIA 770 INTERNET TABLET?

A: If you get the error message "**Failed to write data to the device**" (error code 7), press finish, and try running the update wizard again. This problem is encountered on some PCs running Windows XP the first time the update wizard is used. In most cases, the software update wizard will work fine when it is run again.

If the problem persists, you can try running the software update wizard on a different computer or contact a Nokia service point. For further instructions, see <http://www.nokia.com/770/support>.

If you get the error message "**Failed to flash the device**" (error code 8), try running the software update wizard on a different computer or contact Nokia service point. For further instructions, see <http://www.nokia.com/770/support>.

Q: CAN I UPDATE THE SOFTWARE ON MY NOKIA 770 INTERNET TABLET USING A LINUX PC?

A: Yes you can. The tool for updating the software with a Linux PC can be found at www.maemo.org > **Downloads** > **How to use the flasher and the developer root fs.** -link. The updating tool is a command line tool, so you need to be familiar with command line tools in the Linux Operating System. Note that the update with a Linux PC might not be as well documented as the update with a Windows PC.

Important: This software is work-in-progress and use of this software requires special skills and knowledge. The software and the instructions provided herein or with the software may not be complete. Improper use or installation of this software may harm the device you are installing it into, or the device you are using it with. By accepting the License Agreement you also agree to use this software at your own risk and accept that Nokia assumes no liability and does not provide any warranties, support or services related to the software.

Q: HOW DO I UNINSTALL THE NOKIA 770 SOFTWARE UPDATE WIZARD FROM MY PC?

A: Do the following in the Windows operating system:

1. Open the **Start** menu, and select **Settings > Control Panel > Add/Remove Programs > Nokia 770 software update wizard**.
2. Click **Change/Remove**, and follow the uninstallation instructions on the screen.

Q: HOW DO I UPDATE THE SOFTWARE ON MY NOKIA 770 INTERNET TABLET?

A: To update the software on your Nokia 770 Internet Tablet, you need the following files:

- Nokia_770_software_update_wizard.exe
- Latest software update file

Download these files to your PC from <http://www.nokia.com/770/support>.

To install the **Nokia 770 software update wizard** on your compatible PC, follow the installation guide provided with the wizard. To update the software on your device, follow the instructions on the Nokia 770 software update wizard carefully.

Important: Make sure the battery of your device is fully charged. The loss of power, disconnecting the cable, or other disruption during the update will render the device inoperative.

Important: Back up data saved on your device. Otherwise you will lose all data while updating the software. For further instructions, see the user guide.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I CHANGE THE CLOCK SETTINGS ON MY NOKIA INTERNET TABLET?

A: You can set the date and time, select an analog or digital clock, set an alarm, and access language and regional settings. Tap the **Applications** button, and select **Utilities > Clock**, or tap the date and time shown on the right of the screen.

Q: WHAT KIND OF MEMORY CARDS DOES MY NOKIA 770 INTERNET TABLET SUPPORT?

A: Your Nokia 770 Internet Tablet supports dual voltage (1.8/3 V) and single voltage (3 V) reduced-size MultiMediaCards (RS-MMC). Check the compatibility of an RS-MMC with its manufacturer or provider.

To avoid memory card problems, always use Nokia memory cards.

Q: HOW DO I DEFINE THE HSCSD CONNECTION SETTINGS ON MY NOKIA 770 INTERNET TABLET?

A: High Speed Circuit Switched Data (HSCSD)

To create a new **HSCSD** connection, do the following:

1. Open the **Connection manager** application from the task navigator.
2. Select **Connection manager > Tools > Connectivity settings... > Connections > New > Next**.
3. In the **Connection setup: Name and type dialog**, define the following settings:
 - Connection name** - Enter a descriptive name for the connection.
 - Connection type** - Select **Data call**, and tap **Next**.
4. Select the type of cellular network over which the Internet connection takes place: **GSM/UMTS** or **CDMA**. Tap **OK**.
5. In the **Connection setup: Data call dialog**, define the following settings:
 - Dial-up number**
 - User name**
 - Password**
If you do not know these settings, contact your Internet service provider.
 - Prompt password at every login** - Select this option if you wish to write a new password every time you log onto the Internet.
6. Select **Next > Advanced > Call speed**, and define the following settings:
 - Call type** - Select **High speed**.
 - Modem type** - Select **Analogue, ISDN v.110, or ISDN v.120**
Contact to your Internet service provider for more information on which modem type you should use.
 - Maximum data speed** - These settings are between **14400 bps** and **57600 bps** depending on which modem type you are using.
7. Select **OK > Finish**.

To edit the settings, select the connection, and tap **Edit**.

Note: Your mobile phone, SIM card, and your local GSM/UMTS or CDMA operator need to support HSCSD connection. If you are not sure, contact your service provider for more information.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: DO I LOSE ALL MY DATA IF I RESTORE ORIGINAL SETTINGS TO MY NOKIA 770 INTERNET TABLET?

A: When you **restore original settings** that does not affect your own data, including the following:

- Your own content: files, notes, audio or video tracks, contacts etc.
- All security codes and passwords
- Device language
- Game scores

The **restore original settings** function restores the configuration of your Nokia 770 Internet Tablet back to the original factory settings.

Q: WHICH PLAYLIST FORMATS ARE SUPPORTED BY THE INTERNET RADIO?

A: The Internet radio on your Nokia 770 Internet Tablet supports .pls and .m3u playlist formats.

Note: These playlist formats may include unsupported audio formats.

Q: HOW DO I CONNECT MY NOKIA INTERNET TABLET TO A COMPUTER?

A: You can connect your device to a compatible Personal Computer (**PC**) with the supplied Nokia connectivity cable **DKE-2**. Use the Universal Serial Bus (**USB**) cable to transfer files to the memory card.

When the USB cable is connected, your Nokia Internet Tablet is listed as a mass storage device on your PC, and the **USB** icon is displayed on your device.

When the USB cable is connected, you cannot access the information on the memory card with your device. However, you can transfer files from your PC to the memory card, and view the contents of the memory card on your PC.

Important: Do not remove the USB cable in the middle of an operation when the device is being accessed. Removing the cable in the middle of an operation may damage the memory card as well as the device, and data stored may be corrupted.

When you are finished with file transfer, do not just pull the USB cable from the PC, but follow the proper procedures to disconnect your device from the PC. For more information, see the user guide of your PC.

Q: HOW DO I USE A MULTIMEDIACARD WITH MY NOKIA INTERNET TABLET?

A: This device supports dual voltage (**1.8/3 V**) and single voltage (**3 V**) reduced-size MultiMediaCards (**MMC**). Check the compatibility of an RS-MMC with its manufacturer or provider.

You can use a memory card as extra storage space. You can back up information to a memory card and restore it if necessary. Remember to make back-up copies or keep a written record of all important information.

- To view and manage the contents of the memory card, tap the **Applications** button, and select **File manager**.
- To rename a memory card, select **File manager > Memory card > Rename...**
- To format a memory card, select **File manager > Memory card > Format...** All data is permanently deleted from the memory card. Tap **Format**.
- To back up data, select **File manager > Tools > Back up/Restore...**, and tap **Backup**. In the **Backup selection** dialog, change the name of the back-up file; tap the name, and enter a new one. In the **Data selection** dialog, select whether you want to back up all data or only the specified file types. To protect the back-up file with a

Nokia 770 Internet Tablet – OS 2005 FAQs

password, tap **Password protect**, enter twice the password you want to use, and tap **OK**.

- To restore information, select **File manager > Tools > Back up/Restore...**, and tap **Restore**. In the **Restore selection** dialog, select the back-up file on the memory card that you want to restore. Tap **OK** and **Restore**.

Q: HOW DO I PLAY THE GAMES ON MY NOKIA INTERNET TABLET?

A: Your device has **three** games: **Chess**, **Mahjong**, and **Marbles**. To start a game, tap the **Applications** button, and select **Games** and the desired game. In the game start-up screen, tap **Play**.

For more information on how to use the tools, utilities and games in your device, see the help of each individual application.

Q: HOW DO I USE THE SKETCH APPLICATION ON MY NOKIA INTERNET TABLET?

A: You can draw simple images and send them through e-mail. All the sketches are saved in .png format. Tap the **Applications** button, and select **Utilities > Sketch**.

Q: HOW DO I USE THE NOTES APPLICATION ON MY NOKIA INTERNET TABLET?

A: You can create and save text notes, and send them through e-mail. Tap the **Applications** button, and select **Utilities > Notes**.

The notes application supports the following file formats: ascii (plain text with no formatting) and .note.html (formatted text). The application does not support the full .html file format.

Q: HOW DO I USE THE CALCULATOR ON MY NOKIA INTERNET TABLET?

A: **Note:** This calculator has limited accuracy and is designed for simple calculations.

To access the calculator, tap the **Applications** button, and select **Utilities > Calculator**.

Q: HOW DO I USE THE CONNECTION MANAGER ON MY NOKIA INTERNET TABLET?

A: With **Connection manager**, you can monitor and manage connections established with the device. Tap the **Applications** button, and select **Connection manager**.

Q: HOW DO I USE THE FILE MANAGER ON MY NOKIA INTERNET TABLET?

A: In **File manager**, you can move, copy, rename, and open files and folders available in the device, compatible mobile phone, or memory cards inserted in them.

Tap the **Applications** button, and select **File manager**. The main folders are shown on the left and the subfolders and files in them on the right.

Nokia 770 Internet Tablet – OS 2005 FAQs**Q: HOW DO I USE THE CONTROL PANEL ON MY NOKIA INTERNET TABLET?**

A: **Control panel** allows you to perform configuration and customization tasks. Tap the **Applications** button, and select **Control panel**. A list of available functions and settings is displayed. For more information, see the help of each function and setting.

- **Application installer** - This feature is intended for software developers only. It enables installing new applications, viewing installed packages, and uninstalling currently selected packages.
- **Backup/Restore** - Copy information to a memory card, and restore it to your device.
- **Certificate manager** - View and manage digital certificates on your device.
- **Connectivity** - Define the preferred wireless connection, and set idle times for all connection types. Create and edit Internet access points.
- **Date & time** - Select the home city, date, time, and daylight savings time.
- **Device** - Change the name of your device, and view information about your device and end-user licenses.
- **Display** - Change the brightness of the display, set the automatic touch screen and keypad lock, and define how soon the display brightness goes down to save power, and how soon the screen is turned off.
- **Language/Region** - Select your region and device language.
- **Memory** - View the memory status of the device and the inserted memory card.
- **Personalization** - Customize the look and feel of the device.
- **Screen calibration** - Calibrate the touch screen.
- **Security** - Turn on the automatic device lock, set the time-out period, and change the device lock code.
- **Sounds** - Set the master volume, or mute all device sounds. Select the level of system alerts, keypad sounds, and touch screen sounds.
- **Text input settings** - Teach the device your handwriting style, set default and alternative text input languages, set character recognition speed, and turn word completion on or off.

To open a function or a setting, tap it once with the stylus.

To select the control panel view, select **Control panel > View > Large icons** to display the application icons as a grid, or select **Small icons** to display the icons as a list.

To restore original factory settings, select **Control panel > Tools > Restore original settings....** This function does not affect content you have created, security codes, passwords, the device language, or game scores.

To install connection settings from cellular operator database, select **Control panel > Tools > Setup wizard....**

Q: HOW DO I USE THE PDF READER ON MY NOKIA INTERNET TABLET?

A: You can view documents in Portable Document Format (**PDF**). Tap the **Applications** button, and select **PDF reader**.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I USE THE NEWS READER ON MY NOKIA INTERNET TABLET?

A: You can receive and read Really Simple Syndication (**RSS**) news feeds from service providers. The service provider may be a news agency, entertainment site, or an individual who writes an online diary or journal.

Tap the **Applications** key, and select **News reader**. The news folders you have created are shown on the left. There may also be predefined folders.

To subscribe to a news feed, tap the **News feeds** button on the application toolbar, and enter or paste the address of the news feed to the **Add feed** dialog. Obtain the address from the feed provider's Web site. Search for a link labeled Extensible Markup Language (**XML**) or **RSS**, and copy the address of that link by using the context-sensitive menu. Hold the stylus down on the link for a second, and select **Copy link location**. Paste the link to the **Add feed** dialog.

The news reader supports the following file formats: Rich Site Summary, RDF Site Summary, Really Simple Syndication (all are also known as **RSS**), and Atom.

Q: HOW DO I VIEW IMAGES ON MY NOKIA INTERNET TABLET?

A: You can view images stored on your device, compatible mobile phone, or MultiMediaCard (MMC). Tap the **Applications** button, and select **Images**. The image viewer supports the following file formats:

- .bmp
- .gif
- .ico
- .jpeg
- .png
- .tiff
- .svg tiny
- animated .gif

The image viewer does not necessarily support all variations of a file format.

Q: HOW DO I USE THE VIDEO PLAYER ON MY NOKIA INTERNET TABLET?

A: You can watch video clips stored on your device, compatible mobile phone, or MultiMediaCard (MMC). You can also watch streaming videos from the Internet. Tap the **Applications** button, and select **Video player**. The video player supports the following file formats:

- .3gp
- .avi
- .h.263
- .mpeg1
- .mpeg4
- .rv (RealVideo)

The video player does not necessarily support all the variations of a file format.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I USE THE INTERNET RADIO ON MY NOKIA INTERNET TABLET?

A: With the Internet radio you can listen to Internet radio channels or any other compatible audio streams.

To add a radio channel to the playlist, do the following:

1. In the Web browser, copy the link of the desired radio channel stream to the clipboard of the device. Hold the stylus down on the link for a second, and select **Copy link location**.
2. In the home view of the device, tap the **Audio player** button on the **Internet radio channels:** dialog. The audio player application opens.
3. Select **Audio player > Play list > Add stream...**
4. Tap the **Web address** field, and paste the link of the radio channel stream. Tap **OK**.
5. Select **Audio player > Track > Add to favorites**.

To listen to a radio channel, select the desired channel from the playlist on the **Internet radio channels:** dialog, and tap the **Play** button. To stop listening, tap the **Stop** button.

To adjust the volume, tap the **Volume** button, and drag the slider with the stylus. To close the volume control pop-up dialog, tap anywhere outside it.

Q: HOW DO I USE THE AUDIO PLAYER ON MY NOKIA INTERNET TABLET?

A: You can listen to music and other audio files stored on your device, compatible mobile phone, or memory card, and listen to audio streams from the Internet. You can also create and manage playlists. Tap the **Applications** button, and select **Audio player**. The audio player supports the following file formats:

- .aac
- .amr
- .mp2
- .mp3
- .wav
- .ra (RealAudio)

The player does not necessarily support all the variations of a file format.

Q: HOW DO I USE THE E-MAIL FOLDERS ON MY NOKIA INTERNET TABLET?

A: The **Inbox** folder contains received messages. The headers of unread messages are shown in bold.

To send a new message, tap the **New e-mail** button. To reply to a message, tap the **Reply** button. To send a reply to the sender of a message and to the recipients in the **CC** field, tap the **CC** button. To forward a message, tap the **Forward** button. To delete a message, tap the **Delete** button. To send all unsent messages and receive all new messages, tap the **Send/Receive** button.

To search for a message, select **E-mail > Tools > Search**.

Outbox folder

Messages waiting to be sent are saved temporarily in the **Outbox** folder.

The status of each message is shown next to the message header:

- **Waiting** - The message will be sent the next time you connect to your mailbox.
- **On request** - The message is sent only if you tap the message and the **Send** button.

Nokia 770 Internet Tablet – OS 2005 FAQs

- **Suspended** - The sending of the message was canceled using the **Cancel sending** function.
- **Failed** - The message could not be sent.

To send the selected message again, tap the **Resend** button. To cancel the sending of the selected message, tap the **Cancel** button.

Sent folder

After a message is sent, it is moved to the **Sent:** folder.

To specify the settings of the **Sent:** folder, select **E-mail > Folders > Folder settings....** Define the following options:

- **Sent folder clean-up on:** - Select this option to allow automatic deletion of sent messages.
- **Remove messages older than:** - Select how often the sent messages are deleted.
- **Select time:** - Select (days, weeks, or months) how the interval for deletion is measured.

Drafts folder

In the **Drafts** folder, you can save unfinished messages or messages that you want to send later.

Own folders

To create a new folder, select **E-mail > Tools > Manage folders....** Tap **New**, and give a name for the new folder.

To delete a folder, tap the folder, and select **E-mail > Folders > Delete**

Q: HOW DO I USE E-MAIL SCHEDULING ON MY NOKIA INTERNET TABLET?

A: When an Internet connection is active, you can send and receive e-mail messages at scheduled intervals. To define e-mail scheduling settings, do the following:

1. Select **E-mail > E-mail > Scheduling....**
2. Select the mailbox for which you want to enable scheduling, and tap **Edit**.
3. To define the start time, end time, and interval of sending and receiving, tap the desired field, and tap the arrows to change the time. If you use the **12-hour** clock format, tap the **am/pm** field. In the **Days:** field, highlight the weekdays you want the connection to be made.
4. Tap **OK** to save the settings.

Q: HOW DO I WRITE AND SEND AN E-MAIL MESSAGE FROM MY NOKIA INTERNET TABLET?

A: To write and send e-mail:

1. Tap the **E-mail** icon in the task navigator.
2. Tap the **New e-mail** button to create a new message.
3. Write the recipient's e-mail address. Add a semicolon (;) to separate multiple recipients. If the recipient is in your personal contacts list, tap the **Contacts** button. Select the recipient from the list, and tap **Add**. After you select all the recipients, tap **OK**.
4. Fill in the subject, and write the message. To send the message, tap the **Send** button.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I RETRIEVE AND READ E-MAIL ON MY NOKIA INTERNET TABLET?

A: E-mail sent to you is not automatically received by your device, but by your remote mailbox on the e-mail server. To read your e-mail, you must first connect to the mailbox and retrieve the e-mail messages to your device.

To retrieve e-mail from a remote mailbox, select **E-mail > E-mail > Send & receive**. Select to retrieve e-mail from all mailboxes or from a selected mailbox. If you have e-mail in the outbox folder, these messages are sent simultaneously.

To open a message, tap twice the header of the message you want to read.

Q: HOW DO I PROGRAM E-MAIL SETTINGS ON MY NOKIA INTERNET TABLET?

A: To be able to receive and send e-mail, you must define the settings of the e-mail services you want to use. For appropriate settings, contact the service provider that offers the service.

To create a new mailbox, do the following:

1. Tap the **E-mail** button, and select **Go to Inbox**. The mailbox setup wizard opens. If you already have saved settings for a remote mailbox, select **E-mail > Tools > New mailbox...** to create a new mailbox.
2. Define the following settings:
 - Mailbox name:** - Enter a descriptive name for your mailbox.
 - Mailbox type:** - Select the e-mail protocol that your e-mail service provider recommends. This setting can be selected only once and cannot be changed after you save the mailbox settings or exit the wizard. Tap **Next**.
 - Name** - Enter a name. The name is shown in the sender field of the messages that you send.
 - User name** - Enter your user name given to you by your service provider. The user name is needed when you log into your mailbox.
 - Password** - Enter your password. The password is needed when you log into your mailbox. If you leave this field empty, you are prompted for a password when you try to connect to your mailbox on the e-mail server.
 - E-mail address** - Enter the e-mail address given to you by your service provider. The address must contain the **@**. Replies to your messages are sent to this address. Tap **Next**.
 - Incoming server (%s)** - Enter the host name or Internet Protocol (**IP**) address of the Post Office Protocol, version 3 (**POP3**) or Internet Mail Access Protocol (**IMAP4**) server that receives your e-mail.
 - Outgoing server (SMTP)** - Enter the host name or IP address of the server through which your e-mail is sent. Tap **Next**.

Simple Mail Transfer Protocol (**SMTP**) servers are used when sending e-mail. To be able to send e-mail, you must define the SMTP host name or IP address, which you obtain from the service provider of the connection you use.

Tip: The SMTP host name or IP address may be different from the host name or IP address of the incoming server (POP3 or IMAP4). For example, once you access your Internet service provider e-mail over a cellular network, you may need to utilize the SMTP server of the cellular network. Thus, you may need to configure as many mailboxes as you have Internet access networks, each mailbox having different SMTP host name or IP address.

Tap **Finish** to complete the mailbox setup or **Advanced** to define optional e-mail settings. For more information on advanced e-mail settings, see the help of the application.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I USE E-MAIL MESSAGING ON MY NOKIA INTERNET TABLET?

A: To open the e-mail application, tap the **E-mail** button, and select the desired function from the menu.

Important: Exercise caution when opening messages. E-mail messages may contain malicious software or otherwise be harmful to your device.

Q: HOW DO I USE BOOKMARKS ON MY NOKIA INTERNET TABLET?

A: To manage the bookmarks you saved in the device, tap the **Web** button, and select **Bookmarks**. The bookmark folders are shown on the left, and the bookmarks in the selected folder on the right.

Note: Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security and content, as you would with any Internet site.

You may not be able to edit or manage the contents of the loaded bookmarks.

- To open a folder and a bookmark contained in it, tap the folder, and tap the bookmark twice.
- To add a bookmark to the current Web page, select **Bookmark... > Web page > Add bookmark...**
- To save a link as a bookmark, hold the stylus down on the link for a second and select **Add link to Bookmarks...**

Q: HOW DO I BROWSE THE INTERNET ON MY NOKIA INTERNET TABLET?

A: To open the browser, tap the **Web** button, and select "**Open new browser window**" or a bookmark.

Before you can connect to the Internet, you must define the proper Internet connection settings.

Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Browse the Web

To open a Web page, tap the address field at the bottom of the screen, and enter the address with the on-screen keyboard. You can also paste an address that you have cut or copied from another application. Tap the **Paste** button.

If you saved a bookmark of a Web page that you want to visit, tap the **Web** button, and select the desired bookmark.

To browse and scroll a Web page, drag a page in the desired direction with the stylus, use the scroll keys, or drag the scroll bars on the right side and bottom of the screen.

To view a page in a larger or smaller size, tap the **Zoom** key. To select a predefined zoom level from the application menu, select **Web > View > Zoom**, and the desired zoom level.

To view the Web page in full-screen size, press the full-screen key. To return to normal view, press the full-screen key again.

To view the Web page in optimized size, select **View > Optimized view**. The Web page is fit to the width of the screen; text and images are zoomed and scaled differently is necessary.

To reload the current page, tap the **Refresh** button. To stop loading, tap the **Stop** button.

Nokia 770 Internet Tablet – OS 2005 FAQs

To browse recently visited pages, tap the **Back** button or the **Forward** button.

To change the Web browser settings, select **Web > Tools > Settings....** For more information, see the help of the application.

Q: HOW DO I DISABLE CONNECTIONS ON MY NOKIA INTERNET TABLET?

A: To disable Wireless Local Area Network (WLAN) and Bluetooth connections, briefly press the **Power** key, select **Flight mode**, and tap **OK**. To enable connections, briefly press the **Power** key, select **Normal mode**, and tap **OK**.

The WLAN and Bluetooth connections are also disabled when you place the protective cover over the device.

Note: In the flight mode, you cannot use features that require network or Bluetooth connection. To use the features, you must first set the device back to normal mode. If the device has been locked, enter the lock code.

Q: HOW DO I CHANGE THE CONNECTIVITY SETTINGS ON MY NOKIA INTERNET TABLET?

A: When you access an application that requires an Internet connection, you are asked to select the connection (Internet access point) you want to use.

In the **Select connection** dialog, select a connection from the list, and tap **Connect**. Only available connections are shown. The connection that you set as preferred appears at the top of the list. If you have not set the preferred connection, the last used connection (if available) is shown first.

To define the connectivity settings, tap the **Applications** key, and select **Control panel > Connectivity settings**.

In the **General** page, define the following settings:

- **Preferred connection** - To change the preferred connection, select a connection from the list.
- **Use without asking** - If you select this option, the Internet access point that you selected in **Preferred connection** is used automatically when you start an application requiring an Internet connection. In this case, you do not need to confirm the connection.

On the **Idle times** page, select the time after which the Internet connection ends automatically if the connection is not used. Use **Packet data idle time** for packet-switched data connections, **Data call idle time** for circuit-switched data calls, and **WLAN idle time** for connections created through a Wireless Local Area Network (WLAN) access point.

Note: Time-based charges may apply to the Internet connections. Check with your service provider, and adjust the idle times accordingly.

Note: The network may also have idle timers that may cause the Internet connection to break, regardless of the idle timers of the device.

To use a connection automatically, select **Control panel > Connectivity settings > General**. Set the desired connection as **Preferred connection**, and select **Use without asking**.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I SET UP A CELLULAR CONNECTION ON MY NOKIA INTERNET TABLET?

A: Before you can connect to the Internet over a wireless network, you must have the following:

- Subscription to the desired data service from your wireless service provider
- Proper Internet settings from your wireless service provider

Tip: Your device includes a settings database with predefined settings of some wireless operators. Select your operator from the list, and the settings are installed on your device. To access the database, tap the **Applications** button, and select **Control panel > Control panel > Tools > Setup wizard...**

Note: All wireless operators and settings are not listed, and some settings may also be out of date.

To set up or edit a wireless connection manually, do the following:

1. In the **Connection setup: Name and type** dialog, define the following settings:
 - **Connection name** - Enter a descriptive name for the connection.
 - **Connection type** - Select the type of network service over which you want to access the Internet. To use a packet data service in a wireless network, such as General Packet Radio Service (**GPRS**), select **Packet data**. To use a circuit-switched data service in a wireless network, such as High Speed Circuit-Switched Data (**HSCSD**), select **Data call**.
2. In the **Choose wireless network** dialog, select the type of wireless network over which the Internet connection takes place: **GSM/UMTS** or **CDMA**. You must select the network manually, if you have not paired any mobile phone with your device.
3. In the connection setup dialog, define the following settings:

Tip: It is common in GPRS packet data networks that the access point name is **Internet** or it is left blank; the dial-up number is usually ***99#**; and the user name and the password may be left blank. For Code Division Multiple Access (**CDMA**) packet data network settings, contact your service provider.

- **Access point name** - Enter the name of the Internet access point. Obtain the name from your Internet service provider. This setting is shown if you selected packet data connection, and your phone uses a Global System for Mobile communication (**GSM**) wireless network.
 - **Dial-up number** - Enter the modem telephone number of the Internet access point.
 - **User name** - Enter a user name, if required. The user name is usually provided by the Internet service provider.
 - **Password** - Enter a password, if required. The password is usually provided by the Internet service provider.
 - **Prompt password at every login:** - Select this option if you wish to write a new password every time you log onto an Internet server, or if you do not want to save your password in the device.
4. When you are finished, tap **Advanced** in the **Connection setup: Complete** dialog to define advanced settings, if necessary. For more information, see the help of the application.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: HOW DO I USE BLUETOOTH WIRELESS TECHNOLOGY ON MY NOKIA INTERNET TABLET?

A: Before you can open an Internet connection over a cellular network, you must pair a compatible mobile phone with your device. Your device needs an external modem (phone), which is connected to your device with Bluetooth wireless technology.

Bluetooth wireless technology

Your device is compliant with **Bluetooth Specification 1.2** supporting the following profiles: Dial-Up Networking, File Transfer/Object Exchange, Generic Access, SIM Access, Serial Port.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

Features that use Bluetooth technology or allow such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

A Bluetooth connection does not require that the compatible phone and the Nokia 770 Internet Tablet be in line of sight, but both devices should be within **10 meters (32 feet)** of each other. Connections can be subject to interference from obstructions, such as walls or other electronic devices.

Your device operates always in non-discoverable and non-connectable mode, and is not visible to other devices through the Bluetooth connection, unless you create such connection. Do not create connections to Bluetooth devices you do not trust.

Pair a phone with your device

You must always initiate the pairing of devices from your Nokia 770 Internet Tablet. Although you can only use **one** phone at a time, you can pair several phones with your device.

To pair a phone with your device, do the following:

1. Tap the **Phone** icon in the status indicator area, and select **Select phone....** The selection wizard opens, and your device begins to search for compatible Bluetooth devices. If you have already paired a phone with your device, the menu item is called **Change phone....** In that case, select **Change phone...**, and tap **New**.
2. Select the desired phone from the list of found devices, and tap **Next**. Your device generates a passcode.
3. Use the generated passcode or replace it with a passcode of your own. Tap **Next**, and enter the same passcode on your phone.
4. Tap **Finish** to save the settings.

Tip: Set your Nokia 770 Internet Tablet as a trusted device from the Bluetooth menu of your phone. This way you allow your device to access your phone, and you do not have to confirm the connection every time you activate it. For more information, refer to the user guide of your phone.

To change the paired phone, do the following:

1. Tap the Phone icon in the status indicator area, and select Change phone.... The Phone dialog opens, and all paired phones are shown in the Selected phone: list.
2. Select the desired phone, and tap **OK**.

To view information about the currently selected phone, tap **Details**.

To delete the currently selected phone from the list, select **Details > Delete**.

Nokia 770 Internet Tablet – OS 2005 FAQs

Q: WHAT IS THE DIFFERENCE BETWEEN A SOFTWARE UPDATE AND AN OPERATING SYSTEM UPGRADE?

A: Software update is the latest version of the Internet Tablet 2005 software edition. It is available for downloading at <http://www.nokia.com/770/support>.

The Nokia 770 Internet Tablet's software is upgradeable. Nokia is planning to launch an operating system upgrade next year - Internet Tablet 2006 software edition - with support to additional mainstream and novelty services, including Internet telephony (VoIP) and Instant Messaging.

Q: HOW DO I EDIT A WLAN CONNECTION ON MY NOKIA INTERNET TABLET?

A: The following settings are shown when you edit an existing Wireless Local Area Network (WLAN) connection or when you skip the scan for WLAN networks:

- **Network name (SSID):** - Shows an empty field or the name of the previously defined connection.
- **Network mode** - Select between **Infrastructure** and **Ad hoc** modes. The Infrastructure mode is used with the Internet connections.
- **Security method:** - Select **None** (no security), **Wired Equivalent Privacy (WEP)** (medium security), **Wi-Fi Protected Access (WPA)** pre-shared key (high security), or **WPA with EAP** (high security).

Tip: The device supports WEP with key lengths of **40, 104, or 232** bits (equal to **64, 128, and 256** bits depending on the WLAN access point manufacturer).

For example, in the access point, select **40 (64)** bits and enter **5** characters. In the device, select correspondingly **40** bits and enter the same **5** characters.

Q: HOW DO I CREATE A NEW WLAN CONNECTION ON MY NOKIA INTERNET TABLET?

A: To set up the Wireless Local Area Network (WLAN) connection manually, do the following:

1. In the **Connection setup: Name and type** dialog, define the following settings:
 - **Connection name** - Enter a descriptive name for the connection.
 - **Connection type** - Select **WLAN**.
The device asks whether you want to scan for available WLAN networks. Tap **Yes** to start the scan, or **No** to skip it.
After the scan, all available WLAN networks are shown with information about each WLAN connection:
 - Security level of WLAN connection:
No security (for example, a public access point in an airport)
Medium security (Wired Equivalent Privacy (**WEP**) authentication)
High security (Wi-Fi Protected Access (**WPA**) authentication).
The security level of the network affects the settings that are shown when you tap **Next**.
 - Name of the WLAN network
 - WLAN signal strength
 - A checkmark is displayed if the WLAN network is already defined for an Internet connection setup that you have saved in the device
2. Tap **Finish** to save the settings. To define advanced settings, tap **Advanced**. For more information, see the help on Internet settings.

Nokia 770 Internet Tablet – OS 2005 FAQs

Tip: You may need to define advanced settings if, for example, your Internet access requires the use of proxies.

Q: HOW DO I ACCESS THE INTERNET ON MY NOKIA INTERNET TABLET?

A: To access the Internet, you must define the settings of the Internet connection and of the Internet access point through which the connection takes place.

To access the Internet, tap the **Web** button on the task navigator, and select a bookmark. The **Select connection** dialog opens, and the device searches for Wireless Local Area Network (**WLAN**) networks and lists all available connections. Select a connection from the list, and tap **Connect**.

To access and define the Internet connections manually, tap the **Applications** button, and select **Control panel > Connectivity settings > Connections**.

To create a new or edit an existing connection, tap **New** or **Edit**. If you tapped **New**, the welcome page of the Internet setup wizard is displayed. Tap **Next** to proceed to the **Connection setup: Name and type** dialog.

To delete a connection, tap **Delete**.

Q: HOW DO I FIND THE MAC ADDRESS OF THE BLUETOOTH AND WLAN CONNECTIONS ON MY NOKIA 770 INTERNET TABLET?

A: The **Media Access Control** (MAC) addresses of the Bluetooth and wireless local area network (WLAN) connections are not shown anywhere on the user interface of your Nokia 770 Internet Tablet.

To find the MAC address, do the following:

1. Switch the device off, and disconnect the charger from the device.
2. Remove the battery. You can find the MAC addresses of the Bluetooth and WLAN connections printed on the label underneath the battery. A MAC address contains 12 characters.

In a local area network (LAN) or other networks, the MAC address is the unique hardware number of your device.

Q: HOW DO I SEARCH FOR FILES ON MY NOKIA INTERNET TABLET?

A: To search for files you created or downloaded, do the following:

1. Tap the **Applications** button, and select **Search**.
2. Enter a search word or multiple search words. The more search words you use, the more accurate the search results.
3. If needed, limit the search to e-mail messages, contacts, or bookmarks; or select all files on the device. To set additional search options, tap **Options**.
4. To start the search, tap **OK**. Results appear in the **Search Results** window.
5. To stop the search at any time, tap the **Stop** button on the toolbar.

The search function in your device operates with Boolean AND logic. The more search words and options you set, the more accurate the search results. If you get too few results, limit the number of search words and options. The search function is not case-sensitive.